



Scribble & Write

Trace the lights
to learn how to write!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.



Learning Path™

See the Learning.™

See your child's play and learning with the LeapFrog® Learning Path. With each LeapFrog toy on your child's path, you can see the skills your child is exploring during play, learn about what comes next and discover creative learning ideas that are tailored uniquely to your child.

leapfrog.com/learningpath



The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

leapfrog.com

Fun next steps on your child's path to learning!

To Be There Every Step Of The Way.

It's a hope you have for your child and one that LeapFrog shares. As children trace letters with Scribble & Write, they can develop dexterity and a confidence with letters that sets the stage for reading success.



Scribble & Write*

3+ years



**Chat & Count
Smart Phone***

18+ months



My Own Leaptop™*

2+ years



Read With Me Scout*

2+ years

Get more ideas to support
your child's learning at:

leapfrog.com/learningpath

*Products sold separately, and may not be available in all countries. Actual products may vary.

Learning Skills

Light the way to early writing!

Handwriting

Lights and stroke-by-stroke guidance help children write upper- and lowercase letters and numbers.

Letters


Each letter sound is pronounced as the letter is completed to help children learn phonics skills.

Numbers

Learn to write and count along to numbers 1 to 10.



Instructions for Play

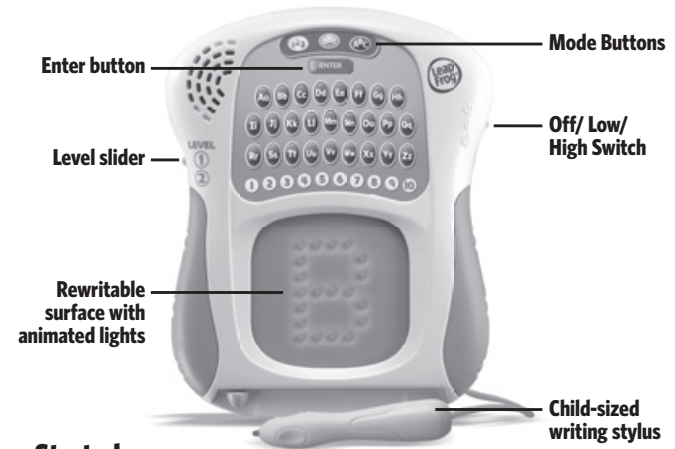

Getting Started

To turn on Scribble & Write, slide the Off/Low/High Switch to low or high volume.

Note: Scribble & Write will turn off automatically after a period of inactivity.

You can wake it up again by sliding the switch to another volume or by pressing any button.

ENTER Press the Enter button when you finish writing a letter or number to signal that you are finished and ready for the next challenge.

Learning Modes

Scribble & Write offers three learning modes.


- ABC Uppercase letters**
Learn to write uppercase letters by tracing over the lights as they animate each stroke.
- abc Lowercase letters**
Learn to write lowercase letters by tracing over the lights as they animate each stroke.
- 123 Numbers**
Learn to write numbers by tracing over the lights as they animate each stroke.

Level Slider


- 1 Free play**
Scribble & Write shows the stroke order and letter shape so your child can explore writing the letter.
- 2 Write for accuracy**
Scribble & Write gives stroke-by-stroke guidance and tells your child if he or she misses a stroke.

Instructions for Care

For indoor, dry-location use only. Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

 **CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

 **ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée des enfants.

 **CAUTION:** To be used under the direct supervision of an adult.

 **ATTENTION :** Doit être utilisé sous la présence directe d'un adulte.

 **WARNING:** Warning. Not suitable for children under 36 months. Long cord. Strangulation hazard.

 **AVERTISSEMENT :** Le cordon peut constituer un risque d'étranglement. Ne convient pas aux enfants de moins de 36 mois [contient des petites pièces].

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the mode switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries, wait 10 seconds and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Consult the dealer or an experienced radio/TV technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

RECYCLE INFORMATION: For information on how this product might be recycled, visit www.leapfrog.com/recycle or call (800) 701-5327.

TM & © 2013 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 3 years and up.
Convient aux enfants à partir de 3 ans.

Part number: 605-11972-A