



# Scrub 'n Play Smart Sink™

 
 


## Parent's Guide

This guide contains important information. Please keep it for future reference.

# INTRODUCTION

Thank you for purchasing the **Scrub 'n Play Smart Sink™**. Play pretend dishwashing with three plates, two cups and a scrub brush. Press the star activity button for listening comprehension activities and follow along with the washing instructions. Turn the play faucet to hot or cold, count along while pressing the soap pump, then press the faucet to see the play water spin. Load the colorful dishes into the matching slots in the drying rack. Open and close the dishwasher door to hear the fun sounds. **This unit should never be used with real water.**

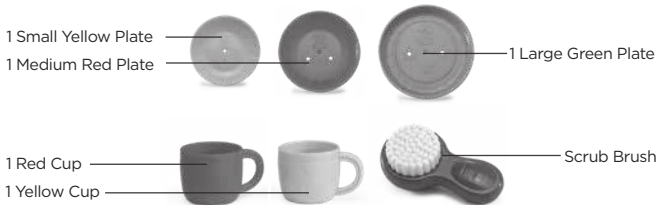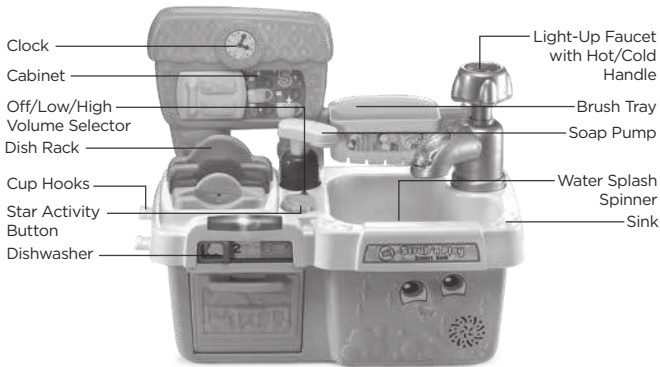

# INCLUDED IN THIS PACKAGE

- One **Scrub 'n Play Smart Sink™**
- One large green plate
- One medium red plate
- One small yellow plate
- One red cup
- One yellow cup
- One scrub brush
- One parent's guide

## **WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE:**

Please keep this parent's guide as it contains important information.

## **ATTENTION :**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## **NOTE :**

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## **WARNING:**

This is not a water toy. Water will damage the toy.

## **ATTENTION :**

Ceci n'est pas un jouet destiné à être utilisé avec de l'eau. Lui éviter tout contact avec l'eau au risque de l'abîmer.

 


## **Note :**

Please cut and discard the cords before playing with the unit. The cords are not part of the product and should be discarded for your child's safety.

## Unlock the packaging locks:


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

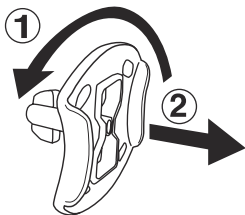

# GETTING STARTED

## BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Use a screwdriver or coin to loosen the screw and open the battery cover.
4. Install 3 new AAA (AM-4/LR03) batteries into the battery compartment as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

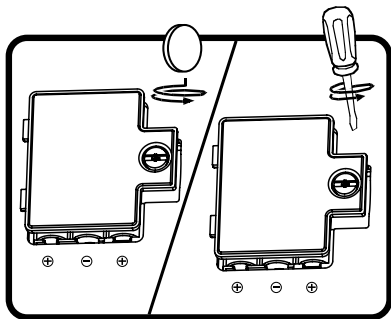

## **BATTERY NOTICE**




- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## **MISE EN GARDE**

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

# PRODUCT FEATURES

 
## 1. Off/Low/High Volume Selector

To turn the unit **On**, slide the **Off/Low/High** volume selector to the **Low**  or **High**  position. To turn the unit **Off**, slide the **Off/Low/High** volume selector to the **Off**  position.




## 2. Dish Rack and Plates

Match the **Plate** by color, size or number to the correct slot in the **Dish Rack** to hear its size or color. Remove the **Plate** to hear fun phrases, counting or a song about sizes and colors.

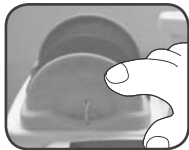

## 3. Light-Up Faucet, Hot/Cold Handle & Water Splash Spinner

 Turn the **Hot/Cold Handle** to select the temperature, hear a song about washing dishes and light up the **Faucet**. Press the **Hot/Cold Handle** down to hear water sounds and watch the **Water Splash Spinner** at the bottom of the sink spin like draining water.

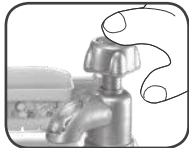

## 4. Three-Cycle Dishwasher

Open the **Dishwasher** door to put dishes inside and close the door. Next, slide the selector to choose between three cycles: Wash, Rinse or Dry. Hear fun sounds or a counting song from 1 to 10.



## 5. Star Activity Button

Press the **Star Activity** button to hear suggested activities for pretend play using other features of the toy.



## 6. Soap Pump

Press the **Soap Pump** to count along from 1 to 10.



 
## 7. Scrub Brush and Two Cups

Pretend to clean by using the **Scrub Brush** with its turning bristle head to scrub the two **Cups**.



## 8. Sliding Cabinet With Clock

Slide the **Cabinet** door from side to side to reveal numbers and change the time on the rotating **Clock**.

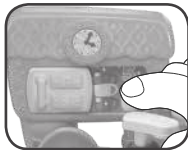

# ACTIVITIES

## 1. Hand Wash Dishes

Pretend to hand wash dishes in the sink by using the **Plates** and **Cups** with the **Soap Pump**, **Scrub Brush** and **Light-Up Faucet**. Follow the three steps shown on the **Brush Tray**: Soap, Scrub and Rinse. Afterwards, put the dishes away into their matching places in the **Dish Rack**.

## 2. Dishwasher Play

Put **Plates** or **Cups** inside the **Dishwasher** and close the dishwasher door. Next, slide to choose the dishwasher cycle to pretend to go through all three cycles: Wash, Rinse and Dry.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

# TROUBLESHOOTING

If for some reason the unit stops working or can't be turned on again, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the unit does not work, replace with an entire new set of batteries.



**IMPORTANT NOTE:**

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Supplier's Declaration of Conformity

Trade Name: LeapFrog®  
Model: 6081  
Product name: Scrub 'n Play Smart Sink™  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 6401 Hollis Street, Suite 100,  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**CLASS 1  
LED PRODUCT**



*Visit our website for more  
information about our products,  
downloads, resources and more.*

*[leapfrog.com](http://leapfrog.com)*

*Read our complete warranty policy online at  
[leapfrog.com/warranty](http://leapfrog.com/warranty).*

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2019 LeapFrog Enterprises, Inc.  
All rights reserved.  
91-003698-000 