



Ironing Time Learning Set™





Instruction Manual

This manual contains important information. Please save it for future reference.

91-003352-002 

INTRODUCTION

Thank you for purchasing the **LeapFrog® Ironing Time Learning Set™**! Press into learning as you explore numbers, colours and shapes and sing the alphabet song.

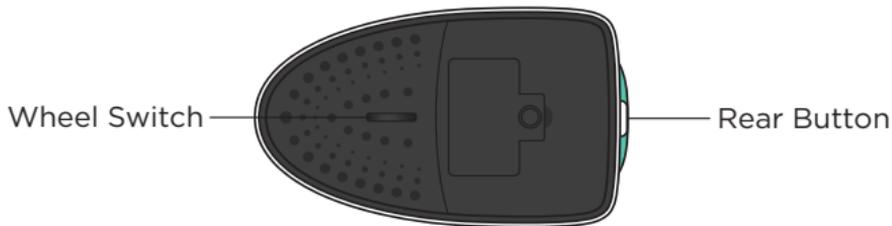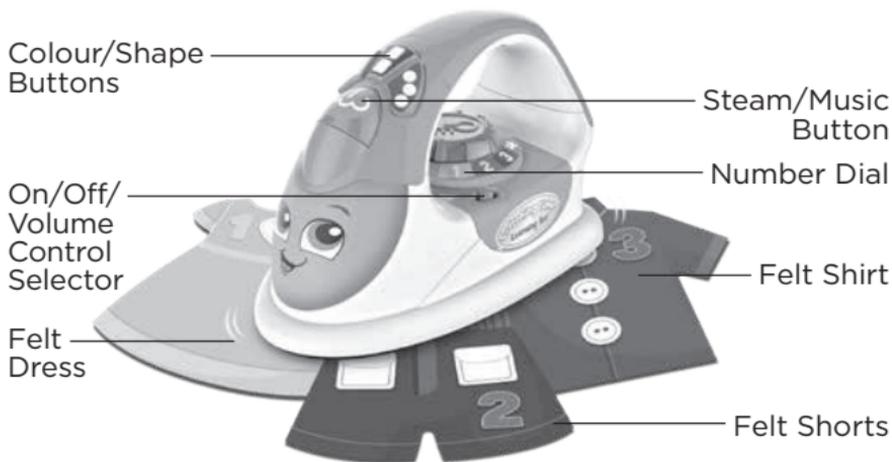

INCLUDED IN THE PACKAGE

- Ironing Time Learning Set™
- Felt dress
- Felt shorts
- Felt shirt
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

NOTE

Iron is surface washable. Felt clothes are hand wash only.




NOTE

Please cut and discard the cords before playing with the unit. The cords are not part of the product and should be discarded for your child's safety.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

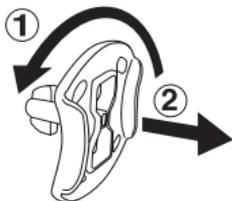

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

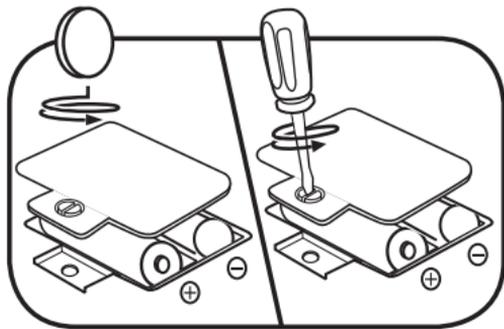

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

LeapFrog® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES


1. On/Off/Volume Switch

Slide the **On/Off/Volume Switch** to turn the toy on and select Low or High volume.



2. Colour/Shape Buttons

Press to hear silly colour and shape phrases and fun sounds.

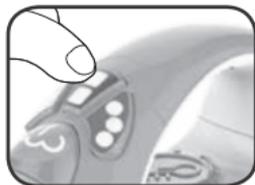


3. Number Dial

Press to hear temperature phrases and engaging sounds.




4. Steam/Music Button

Press to hear realistic steam sounds, three delightful learning songs and four melodies.

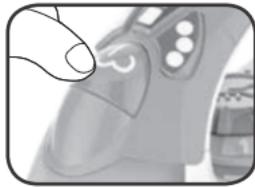

5. Wheel Switch

Push the iron forwards or backwards to activate the wheel switch and trigger realistic ironing sounds, entertaining learning phrases and fun learning activities.

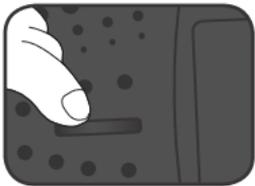

6. Back Button

Tip the iron upright and set it down on this button to trigger goofy sounds and learning phrases related to the toy's new position.



7. Felt Dress, Shorts and Shirt

Iron these items for pretend play fun.



ACTIVITIES

Pushing the iron back and forth activates the wheel switch, which triggers two kinds of activities. Toy-recognition activities provide your child with responses from the iron based on their actions. Exploratory activities are open-ended opportunities for children to practise what they've learned.

Toy-Recognition Activities

Count the Creases

Count to five as you move the iron back and forth.

Theme Song

Move the iron back and forth to play the iron's theme song verse by verse.

ABC Song

Play the ABC song verse by verse as you move the iron back and forth.

Sing the Colours Song

Move the iron back and forth to play the Colours song verse by verse.

Colour Dance

Play upbeat melodies and trigger an engaging light show as you iron.

Silly Sounds

Move the iron back and forth to trigger silly cartoon sounds.

Tip Me Up!

Follow the iron's instructions to set it on its end and give it a rest.

Tip Me Over!

Follow the iron's instructions to get back to work and hear encouraging phrases.

Press the Steam Button

Press the steam button to practise counting.

Testing, Testing!

Turn the dial to the correct number and press the buttons based on their colours and shapes to make sure everything is in working order.

Heat Me Up!

Turn the dial to the correct number to pretend to heat the iron.

Exploratory Activities

Iron Clothes That Are a Certain Colour

Practise your colours by choosing the clothes by the colour the iron requests.

Iron a Certain Type of Clothing Item

Select the shorts, shirt or dress to iron.

Iron Clothes by Description

Practise categorising clothing by descriptions like comfy,

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2022 LeapFrog Enterprises, Inc.
All rights reserved.
91-004041-001 (JK)