



Build-a-Slice Pizza Cart™

 


Instruction Manual


This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Build-a-Slice Pizza Cart™**! Explore counting, colours and even some Italian phrases while making, baking and delivering your own pretend pizzas! Ding! Ding! Order up!

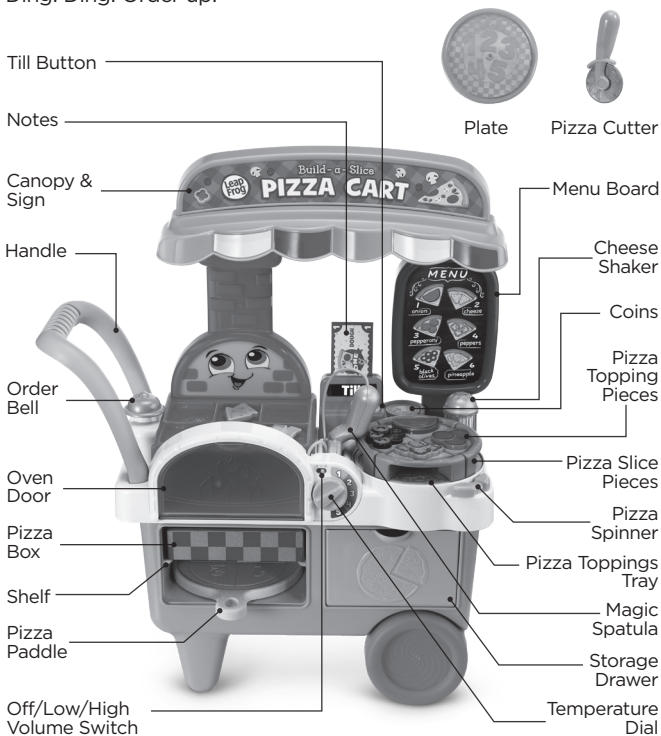

INCLUDED IN THE PACKAGE

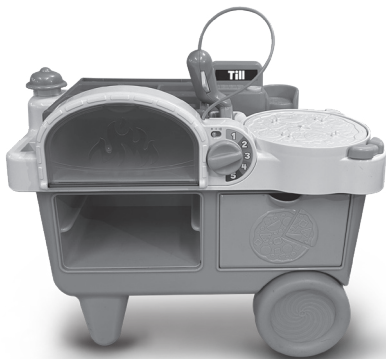 

1 Build-a-Slice Pizza Cart™



 
1 handle



1 canopy & sign




1 price menu board

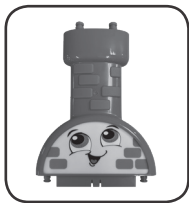

1 chimney



 
4 pizza slices

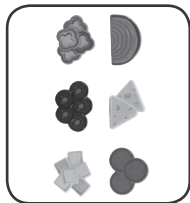

6 pizza toppings



 10 notes

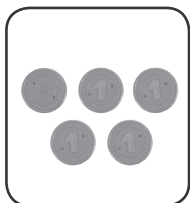

5 coins



1 plate



1 pizza cutter



 
1 cheese shaker



1 pizza paddle



1 pizza box

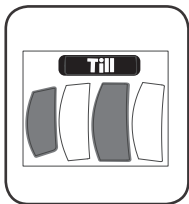

1 customer label

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
NOTE :

After removing from packaging, wipe all the included pieces using a slightly damp cloth. Wash the **Pizza Cutter, Plate** and the **Oven Paddle** thoroughly before and after use. To avoid damaging the electronics, do not submerge the items in water or expose them to excessive moisture.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

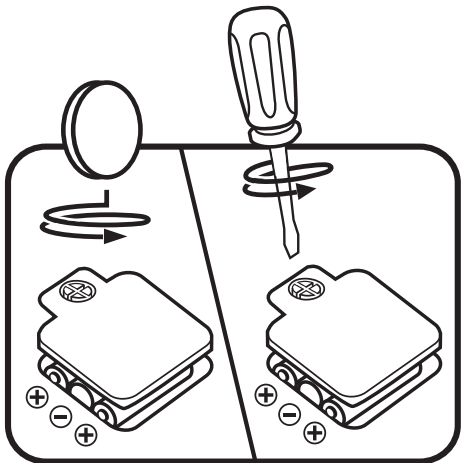

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

 
www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.


ASSEMBLY

With the **Build-a-Slice Pizza Cart™** safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the **Chimney** and **Price Menu Board** firmly into the top of the **Pizza Cart**.

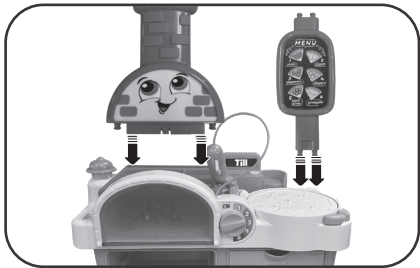

2. Attach the **Canopy & Sign** onto the **Chimney** and **Price Menu Board**.

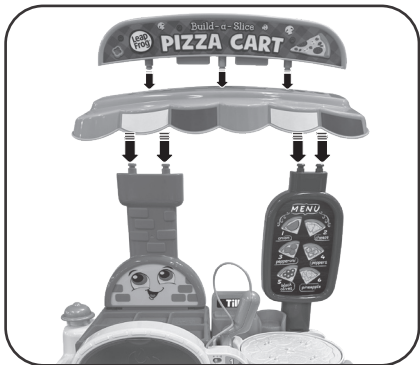 


3. Insert the **Handle** into the top of the **Pizza Cart**.



LABEL APPLICATION

 Please securely stick the labels to the cart as indicated below. Match the label numbers to the corresponding numbered spots on the cart. **Note:** Two spots on the **Canopy** will not receive labels. They are intended to remain green.

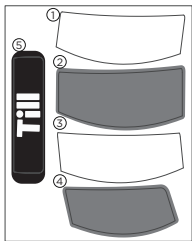

PRODUCT FEATURES

 
1. Off/Low/High/Volume Switch

Slide the **Off/Low/High/Volume Switch** to turn the toy on and to adjust the volume.




2. Magic Spatula

Place a **Pizza Topping** on a **Pizza Slice** and then scoop it with the **Magic Spatula** to hear learning phrases, silly phrases, melodies and short songs.

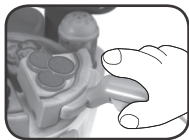


3. Order Bell

 Press the **Order Bell** to receive pizza orders.

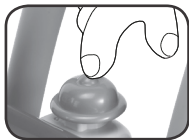


4. Pizza Spinner

 Slide the arrows to the right to rotate the **Pizza Spinner** and activate learning songs and melodies.

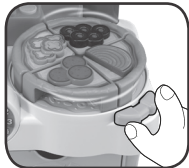

5. Oven Dial

 Turn the **Oven Dial** to hear number songs, numbers in English and Italian and silly phrases.

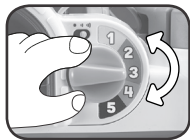

6. Pizza Topping Tray

Look at the images on the tray and then sort the toppings into their correct spots. The tray is non-electronic and doesn't play any audio.



7. Price Menu Board

Look at the **Price Menu Board** to see the prices of the different pizza slices. In itself, the **Price Menu Board** is non-electronic, but pressing the **Order Bell** will play different pizza orders. Certain orders will ask kids to reference the **Price Menu Board** and then make slices of pizza that cost specific amounts.



 
8. Till Button

Press the **Till Button** to count to 10. Reaching 10 plays silly phrases and farewell phrases in Italian.



9. Oven Door

Open and close the **Oven Door** to hear fun sounds, fun phrases and vocabulary phrases.

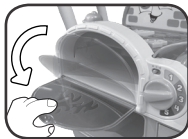

10. Cheese Shaker

The **Cheese Shaker** is non-electronic but periodically there will be a prompt to add a certain amount of cheese sprinkles to a pizza slice. The cart will then automatically count to the requested number while playing sprinkle sounds.



11. Pizza Box Shelf

The **Pizza Box Shelf** is the perfect width to store the **Pizza Box**.



12. Automatic Shut Off

To save power, the **Build-a-Slice Pizza Cart™** shuts down after about 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Order Bell

Pressing the **Order Bell** triggers a range of pizza slice orders. Possible orders include making a slice of pizza:

- Based on its food topping name.
- Based on its food topping colour.
- Based on its food topping shape.
- Based on its cost as listed on the price menu board.
- Based on the type of crust.
 - There will be a prompt to make any type of pizza and then an instruction to bake it at a certain temperature.
- That is the “chef’s choice”.
 - Time to be creative and put any type of pizza into the oven!
- For delivery.
 - There will be a prompt to make any type of pizza, place it into the box and then press the till button a certain amount of times to complete the order.
- That is “perfectly baked”.
 - There will be a prompt to make any type of pizza and then an instruction to open the oven door when the cart counts to a certain number.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email support@leapfrog.co.uk. Creating and developing **LeapFrog®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.

IM-617300-001

Version:1