

Next steps for learning fun!

FCC Compliance Statement. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

Environmental phenomena. The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement. Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

Recycle. Find out how to recycle this product at leapfrog.com/recycle or call (800) 701-5327. For UK consumers, visit www.leapfrog.co.uk/recycle and [/support](http://support).



Number Lovin' Oven
2+ years



My Own Leaptop™
2+ years



Melody the Musical Turtle™
2+ years

CUSTOMER SUPPORT

U.S......leapfrog.com/support
U.K......leapfrog.co.uk/support

Canada.....leapfrog.ca/support
Australia.....funtastic.com.au

WARRANTY INFORMATION

Limited warranty. Visit our website at leapfrog.com for full details of the warranty provided in your country.

Garantie limitée. Veuillez consulter notre site Web à l'adresse leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays.

TM & © 2016 LeapFrog Enterprises, Inc. All rights reserved.

For for children ages 2 years and up. Convient aux enfants à partir de 2 ans.
Item number 19306/ Part number 605-12306-A

Products sold separately and may not be available in all countries. Actual products may vary.



Count Along Register



Parent Guide


This guide contains important information.
Please keep it for future reference.



Ahead.

Find out more at leapfrog.com

Features

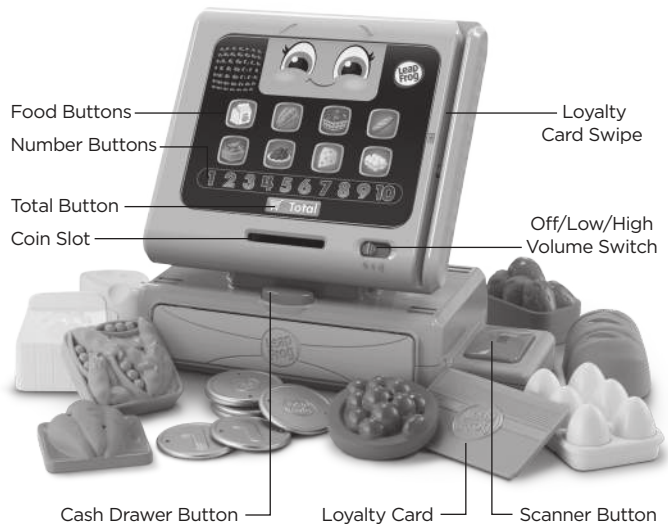

Get Started

Assemble (see assembly instructions). Separate your eight food items from your ten coins. Next, turn the register on by sliding the red volume switch to the Low or High position.

How to Play

Play on your own:

Choose food items and ring them up with the food buttons or the scanner button. When you press the food button you will hear info related to each item. Then press the green total button and you will hear how many coins are needed to check your items out.


Put the correct amount of coins into the count-along coin slot or the register drawer to complete your transaction. Slide the loyalty card through the card swipe for extra fun.

Play with a friend:

Set up your store! Place food items on a table or shelves, give your customer their coins, and invite them on a shopping spree!

Assembly Instructions

Assemble by snapping stabilization foot into register base.

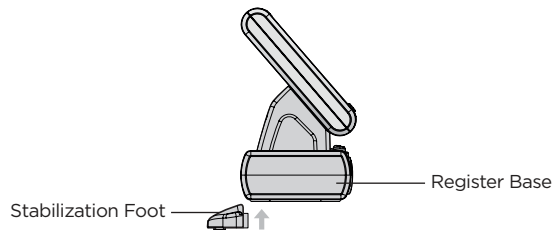

Battery information. Requires 3 AAA (called LRO3 in some countries) alkaline batteries. Nécessite 3 piles alcalines AAA (appelées LRO3 dans certains pays).

Battery removal and installation instructions:

1. Open the battery door with a Phillips screwdriver.
2. If used or dead batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery safety. Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Sécurité relative aux piles. Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser

des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte. les accumulateurs doivent être enlevés du jouet avant d'être chargés.

For dry, indoor-location use only. Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

Utiliser uniquement en intérieur, dans des lieux secs. Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

CAUTION: To be used under the direct supervision of an adult. Notice: Product may tip or fall over if a child uses it to pull him/herself up.

ATTENTION: Doit être utilisé sous la présence directe d'un adulte. Le produit peut basculer si un enfant l'utilise pour se relever.

CAUTION: Adult assembly required.

ATTENTION: Assemblage par un adulte requis.